

Auto Assist Handle



Purpose:

Use with clients who can assist in pulling or pushing their body weight.

Maintain the client's autonomy. Provide minimal guidance out of a vehicle.

Instructions:

Place the handle into the striker, or door latch, of the vehicle. (Locate the metal loop on the inside of the car's door frame).

Have the client pull him or herself out of the vehicle, using the handle as leverage

Safety Precautions:

Ensure the handle is secure before applying any weight.

Limit weight to 350lb.



SEIU 775
BENEFITS GROUP